

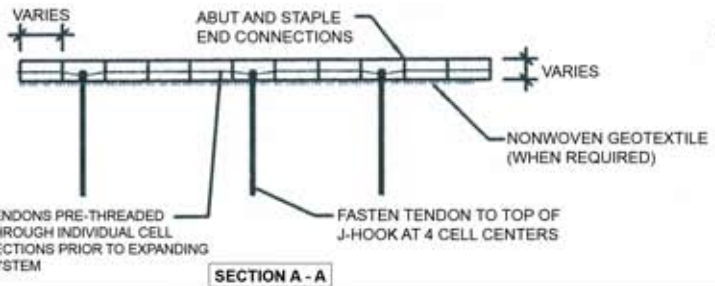



• BEFORE EXPANSION, DRILL TENDON HOLES IN WELD CENTERS WHERE NECESSARY. (5 HOLES PER SLOPE GRID)

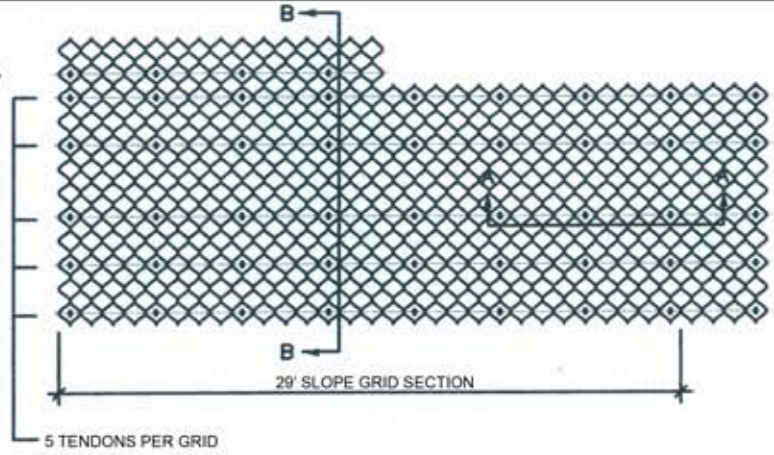


SECTION A - A

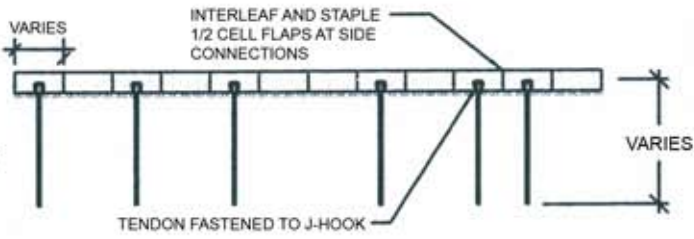

SECTION B - B

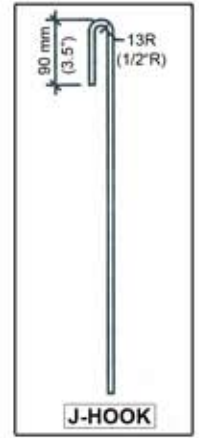

J-HOOK

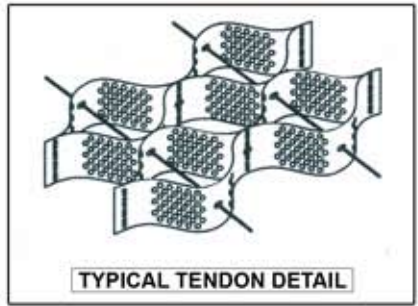

TYPICAL TENDON DETAIL